

OPERATING INSTRUCTIONS


■ Turning the Heart Token On/Off

1. Remove cover by gently separating the cover (held by magnets) from the back of the Heart Token by sliding your fingernail into the recessed area on the left side of the Heart Token.
2. Turn on the Heart Token by sliding up the On/Off switch. 2 beeps will sound.
3. **Note...** The On/Off switch must be in the On position to Record, Play or Erase a message.
4. **Important...** To eliminate battery drain, when not in use always turn off the Heart Token by sliding down the On/Off switch.

■ Recording a Message

Tip... Before recording, take a few minutes to write your message and practice saying your message. This will help ensure a perfect recording every time.

1. Remove cover. Turn on the Heart Token. 2 beeps will sound.
2. To record a message: Hold down the Rec button — a beep will sound to indicate you can begin recording. Continue to hold down the Rec button. Holding the Heart Token close to your mouth (approximately 2") speak clearly into the Mic to record your message. The Heart Token has a 60 second recording length.
3. Release the Rec button to end your message.
4. After lifting your finger from the Rec button two beeps will sound indicating the message is complete. Your message will automatically playback for review.
5. **Note...** The Heart Token will not record a new message over the one that is in the memory. The current message must first be erased. See Erasing a Message (on other side).
6. **Important...** When not in use, always turn off the Heart Token by sliding down the On/Off switch to eliminate battery drain.

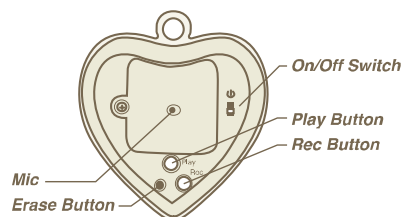

WARNING:
CHOKING HAZARD – Small parts.
Not for children under 3 years.

■ Playing a Message

1. Remove cover. Turn on the Heart Token. 2 beeps will sound. Replace cover.
2. With the Heart Token case closed, gently squeeze the front of the case near the center bottom of the heart to play the message.
3. **Important...** When not in use, always turn off the Heart Token by sliding down the On/Off switch to eliminate battery drain.

■ Erasing a Message

1. Remove cover. Turn on the Heart Token. 2 beeps will sound.
2. To erase a message: Insert a small, pointed object, (e.g., an unwound paperclip) into the Erase hole to reach the recessed erase button. Gently press down until two beeps sound indicating the message is erased from memory.
3. To record a new message: See Recording a Message (on other side) beginning with Step 2.
4. **Important...** When not in use, always turn off the Heart Token by sliding down the On/Off switch to eliminate battery drain.

■ Changing Button Cell Batteries

Important To Know... Replacing batteries WILL NOT erase the recorded message

1. Remove cover.
2. Remove screw on battery door.
3. Open battery door.
4. Turn the Heart Token over to remove the 4 button cell batteries from slots.
Please recycle and dispose of batteries appropriately.
5. Insert 4 replacement batteries (type: AG13/357A) into the slots with the "+" side up.
6. Replace the battery door and tighten the screw. Replace cover.